

# FLYCASE

SILVER

## EXTERNAL STORAGE PERIPHERALS



SILVER FLYCASE  
USB2 & FIREWIRE

- Up to 400 Gb storage
- Aluminium case
- Installs in seconds
- Hot plug to any computer (Mac or PC)
- Partition and format your drive using the step-by-step software package provided

### TECHNICAL SPECIFICATIONS

 
 
Capacities	40Gb - 80Gb - 120Gb - 160Gb - 200Gb - 250Gb - 300Gb - 400 Gb
Transfer rate	USB2 up to 480 Mb/s    USB1.1 up to 12 Mb/s FireWire up to 400 Mb/s
Dimensions	205 x 30 x 115 mm
Maximum power consumption	15 W
Adaptateur secteur	12 V/5V (15 W)
Weight	790 g

### SYSTEM REQUIREMENTS

- Mac or PC equipped as standard with USB2 or USB1.
- Mac OS 8.6 or higher
  - Windows 98, 98SE, Windows ME, Windows 2000 or Windows XP
  - Intel Pentium II / 350 MHz compatible processor or more powerful, 64MB RAM minimum for PCs.

### PACKAGE CONTENTS

- 1 Cable USB 2 to USB 2-Host
- 1 Cable FireWire
- 1 Power supply adapter 12V/5V
- 1 CD with drivers and User's Guide

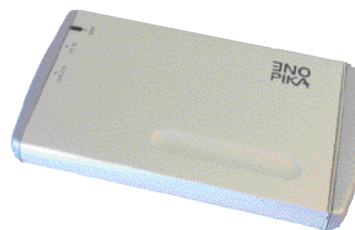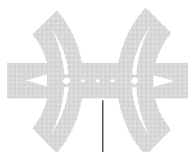

SILVER FLYCASE SLIM  
USB2 & FIREWIRE

- Up to 100 Gb storage
- Aluminium case
- Installs in seconds
- Hot plug to any computer (Mac or PC)
- Bus powered
- Partition and format your drive using the step-by-step software package provided

### TECHNICAL SPECIFICATIONS

Capacities	20Gb - 40Gb - 60Gb - 80Gb - 100Gb
Transfer rate	USB2 up to 480 Mb/s    USB1.1 up to 12 Mb/s FireWire up to 400 Mb/s
Dimensions	141 x 15,5 x 80 mm
Maximum power consumption	5 W
Bus powered	cable USB
Weight	200 g

### SYSTEM REQUIREMENTS

- Mac or PC equipped as standard with USB2 or USB1.
- Mac OS 8.6 or higher
  - Windows 98, 98SE, Windows ME, Windows 2000 or Windows XP
  - Intel Pentium II / 350 MHz compatible processor or more powerful, 64MB RAM minimum for PCs.

### PACKAGE CONTENTS

- 1 Cable mini-USB 2 to USB 2-Host
- 1 Cable FireWire
- 1 USB power supply connector
- 1 CD with drivers and User's Guide